

Cartridge Tips for Epson

Remove the replacement ink cartridge from its package. Then remove the protector cap on the ink nozzle and the clear tape from the bottom of the cartridge.

DO NOT TOUCH the green chip on the side of the cartridge! Doing so may prevent normal operation and printing.

Note:

Before you open the new cartridge package, shake it gently four or five times then remove the cartridge from the package.



Caution

DO NOT SHAKE the ink cartridge after removing from the bag as this can cause leakage.