

## CANON 210, 210XL, 211, 211XL START-UP CARTRIDGE TROUBLESHOOTING

Install cartridge. Start print. After first message appears, click OK to continue. Printer will start printing. If second message comes up and printer's LCD shows error code "E" **do not click cancel printing.** Press and hold down printer "Stop/Reset" button at least 5 seconds or more. Printer will start printing.