

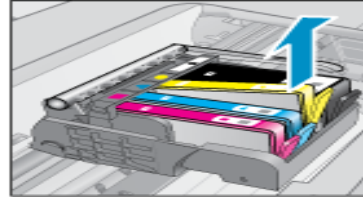
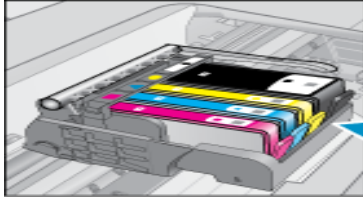


**NOTE:** Do not leave the cartridges outside the product longer than 30 minutes. Doing so can result in damage to both the product and the cartridges.

**1. Removing the ink cartridge:** To remove the cartridge, press the tab on the front of the cartridge to release it, and then remove it from the slot

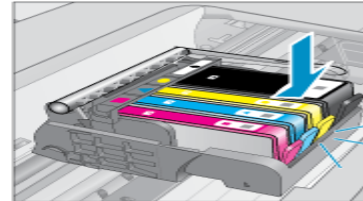

**2. Reinsert the cartridge in the correct slot**

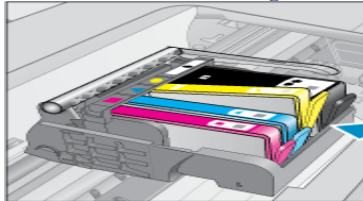


**NOTE:** If the cartridge does not snap into place, remove the cartridge from the carriage. Gently bend the tab away from the cartridge, and then reinsert the cartridge into the carriage. Bend the tab away from the cartridge



**CAUTION:** Be careful not to bend the tab out more than 1.27 cm (0.5 inches). Moving the tab too far might damage the cartridge or cause the tab to break off

Gently bend the tab away from the cartridge. Be careful not to bend the tab more than 1.27 cm (0.5 inches).

Adjust the cartridge tab

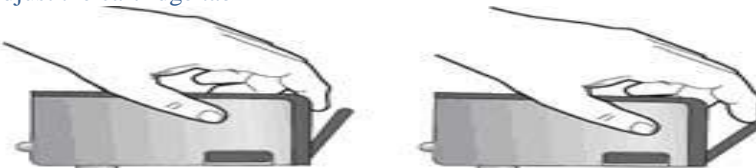

Using the colored shaped icons for help, slide the ink cartridge into the empty slot until it clicks into place and is seated firmly in the slot.

